



# OPTIFIT CONNECT

## IRON HOSEL GUIDE

### INTRODUCING THE OPTIFIT CONNECT HOSEL

The new OptiFit Connect iron fitting system is a multi-cog system that allows for loft and lie adjustments in one head.

The new OptiFit Connect adjustable hosel features four machined pieces for precise and repeatable loft and lie adjustments. Each rotating cog features 3 settings (+, - and neutral/blank) to create 9 unique loft and lie configurations to help every player truly get dialed in for their irons.

OptiFit Connect Iron Hosel		LIE				
		2 Flat	1 Flat	Standard	1 Upright	2 Upright
LOFT	2 Weak			YES		
	1 Weak		YES		YES	
	Standard	YES		YES		YES
	1 Strong		YES		YES	
	2 Strong			YES		

### ADJUSTING THE OPTIFIT CONNECT HOSEL

Similar to our adjustable drivers and other clubs, insert the OptiFit wrench into the hosel screw and rotate counter-clockwise until hosel becomes loose, move the rotating cogs to the desired setting, and tighten clockwise until you feel and hear the wrench “click”. If the screw feels like it is binding, stop and realign components.

<div>+ +</div>	<div>2° Upright lie or weak loft</div>	<div>+ +</div>	<div>1° Upright lie or weak loft</div>	<div>+ and - Results in NO CHANGE to loft or lie</div>
<div>- -</div>	<div>2° Flat lie or strong loft</div>	<div>- -</div>	<div>1° Flat lie or strong loft</div>	
<div>Align Blue Dot on Hosel to Blue Dot on Shaft Sleeve</div>				

Loft	STD	STD	STD	+ 2 Weak	- 2 Strong	+ 1 Weak	+ 1 Weak	- 1 Strong	- 1 Strong
Lie	STD	2 Up +	2 Flat -	STD	STD	1 Up +	1 Flat -	1 Up +	1 Flat -

- “+” will weaken loft OR increase lie angle.
- “-” will strengthen loft OR decrease lie angle.
- “+/-” results in no change to loft or lie
- Blank settings are considered neutral
- Align blue dots on hosel and shaft sleeve.



Scan to learn more about the new OptiFit Connect iron fitting system.