

FAIRWAY & HYBRID



OPTIFIT 4 INSTRUCTIONS

1. Each of the two rotating COGs offer 3 settings: increase 1° (+), decrease 1° (-), and no change (blank)
2. Remove head, identify loft and lie indicators on shaft adaptor
3. Rotate COGs to desired configuration, aligning with respective loft & lie indicators. **See chart for the 7 possible settings.** *Pro tip: if adjusting loft is needed, start by rotating bottom COG to desired loft setting, then adjust lie.*
4. Align white dash on shaft adaptor with white dash on head/hosel
5. Tighten components with a Callaway torque wrench



IRON & WEDGE



OPTIFIT CONNECT INSTRUCTIONS

1. Each of the two rotating COGs offer 3 settings options: increase 1° (+), decrease 1° (-), and no change (blank)

2. Remove head, identify loft and lie indicators on hosel



3. Rotate COGs to desired configuration, aligning with respective loft & lie indicators. **See chart for the 9 possible settings.** Note: a + and a - together equals no change



4. Align blue dot on shaft adaptor with blue dot on head/hosel



5. Tighten components with a blue Callaway torque wrench

